



# Programmable Heat Pump or Multi-Stage Auto Season Thermostat



Owner's Manual

Model 43558

**Introduction****2****CONGRATULATIONS!**

Your new Climate Technology electronic thermostat will provide years of reliable service. By saving energy, your thermostat will pay for itself during its first season of use. Thank you for buying a Climate Technology product!

Please read this manual for complete instructions on installing and operating your thermostat.

If you require further assistance, call Climate Technology Technical Support at 800-676-7861 from 8 AM to 5 PM Central Time.

**Model Information:**

Model Number **43558** \_\_\_\_\_

Serial Number \_\_\_\_\_

Date Purchased \_\_\_\_\_

Where Purchased \_\_\_\_\_

**Table of Contents****3**

|                     |   |       |
|---------------------|---|-------|
| <b>INTRODUCTION</b> | Read This Before Installing Thermostat                | 6-7   |
|                     | Features  | 8-9   |
| <b>INSTALLATION</b> | What You Need   | 10    |
|                     | Selector Switches                                     | 10-11 |
|                     | Remove Old Thermostat                                 | 12    |
|                     | Wire Labeling   | 13-15 |
|                     | Mount Wallplate and Thermostat                        | 16    |
|                     | Connect Wires and Mount Thermostat Cover to Wallplate | 17    |
| <b>PROGRAMMING</b>  | Option Menu   | 18-21 |
|                     | Setting Time and Day                                  | 22-23 |
|                     | Programming Introduction                              | 24    |
|                     | Personal Program Schedule                             | 25    |
|                     | Programming   | 26    |
|                     | Weekday/Weekend Programming                           | 27-28 |
|                     | 7-Day Programming                                     | 29-30 |
|                     | Everyday Programming                                  | 31-32 |

*(continued)*

4

| <b>Table of Contents (continued)</b> |   | <b>4</b> |
|--------------------------------------|---|----------|
| <b>PROGRAMMING (continued)</b>       | Program Options                           | 33       |
|                                      | Programmable Fan                          | 33       |
|                                      | 2 or 4 Programs Per Day                   | 33       |
|                                      | Reviewing Programs                        | 34-35    |
| <b>OPERATIONS</b>                    | Power Switch                              | 36       |
|                                      | System Selection Key                      | 36       |
|                                      | Fan Key                                   | 37       |
|                                      | System Indicator Light                    | 37-38    |
|                                      | Emergency Heat                            | 38       |
|                                      | Reviewing the Current Temperature Setting | 39       |
|                                      | Temporary Manual Override                 | 40       |
|                                      | Permanent Manual Override                 | 41       |
|                                      | Vacation (Programmable) Hold              | 42       |
|                                      | Auto Season Changeover                    | 43       |
|                                      | Home Today                                | 44-45    |
|                                      | Energy Monitor                            | 46       |
|                                      | Filter Monitor                            | 47       |

5

|                               |  |       |
|-------------------------------|--|-------|
| <b>OPERATIONS (continued)</b> | SPAN Settings                                | 48    |
|                               | Auto Recovery                                | 49-50 |
|                               | Keyboard Lock                                | 50    |
|                               | Backlighting ( <i>INDIGLO® Night-Light</i> ) | 51    |
|                               | Remote Sensors                               | 51-52 |
| <b>SAFETY FEATURES</b>        | AC Power Monitor                             | 54    |
|                               | Low Battery Warning                          | 54    |
|                               | Error Mode                                   | 55    |
| <b>TROUBLESHOOTING</b>        | Problems & Solutions                         | 56-57 |
|                               | Technical Support                            | 57    |
| <b>WIRING DIAGRAMS</b>        | Heat Pump Systems                            | 58    |
|                               | Multistage Systems                           | 59    |

## Read This Before Installing Thermostat

### IMPORTANT

**1** Read the entire installation section of this Owner's Manual thoroughly before you begin to install or operate your Climate Technology Thermostat.

### INSTALLATION

**2** All installation is normally performed at your thermostat.

### ARMCHAIR PROGRAMMING

**3** You can program your thermostat before installation by inserting the batteries and following the instructions starting on page 18. This can be done while you relax in your favorite chair and is a very good way to familiarize yourself with all the functions of your Climate Technology Thermostat.

### SYSTEM COMPATIBILITY

**4** Your Thermostat is designed to operate these 24-Volt systems:

- Multi-stage heat pumps with auxiliary heat
- Multi-stage systems (2 stage heat, 2 stage cool)

**This thermostat will not control 120/240 Volt systems or millivolt systems.**

### COMPRESSOR PROTECTION

**5** The thermostat provides a 3.5 minute delay after shutting off the heating or cooling system before it can be restarted. This feature will prevent damage to your compressor caused by rapid cycling.

### TEMPERATURE RANGE

**6** Your thermostat can be programmed between 45°F and 95°F (7°C and 35°C). However, it will display room temperatures from 15°F to 99°F (-9°C and 37°C). "HI" will be displayed if the temperature is higher than 99°F (37°C), and "LO" will be displayed if the temperature is lower than 15°F (-9°C).

### AUTO RECOVERY

**7** Your thermostat is set from the factory to gradually recover the room temperature from an energy saving program to your comfort program. Therefore, the thermostat may turn your system on several minutes prior to your programmed time. This operation is normal, but can be turned off. Refer to the Options Menu information on pages 18-21.

### OPERATION

**8** This system operates on your system's 24 Volt power supply. The supply is monitored by the thermostat, and it will stop functioning if AC power is lost. (When using backup batteries, "No AC Pwr" will be displayed.) All system controls will remain off until power is restored.

**NOTE: The INDIGLO® Night-Light will not function when AC power is lost.**

**NOTE: Any remote temperature sensors (if used on your system) will not operate when AC power is lost.**

### BATTERY WARNING

**9** Batteries may be used optionally to prevent the loss of your thermostat's clock, programs and options due to a power outage. However, when the batteries become drained, a low battery warning will appear on the display. When this message occurs, install 2 new AAA batteries. You have approximately 30 seconds when changing the batteries to keep thermostat's clock and program settings.

**NOTE: The default system selection at power-on is HEAT. Batteries are recommended to prevent an undesired system change due to a power outage.**

**Features**

**INDIGLO® Night-Light**  
activated by pressing any key.

**Alpha-numeric display** shows time, day, temperature, program number, and other feature information as required.

**Home Today:** Overrides energy-saving program temperatures while you are at home for the day.

**Energy Monitor:** Measures and displays heating and cooling system operating time for Today, Yesterday, This Month, Last Month, or Total. By monitoring your energy usage, you can program the thermostat to optimize energy savings.

**Reset:** Press with a paper clip to reset the thermostat and return to power-up settings.



**Temperature Keys:** Keys for raising or lowering temperature settings.

**Power Switch:** Select ON, Positive OFF, or Emergency Heat.


**Soft-touch programming keypad,** see details below.

**System Indicator LEDs:** Show status of Stage 1, Emergency, Stage 2, and Check System.

**System Key:** Use to select system. Select Heat, Cool or Auto.

**Day/Time Key:** Used for entering the Clock setting mode. Use with the Up and Down keys to set the time and day.

**Filter:** Displays the filter usage counter in hours and minutes.

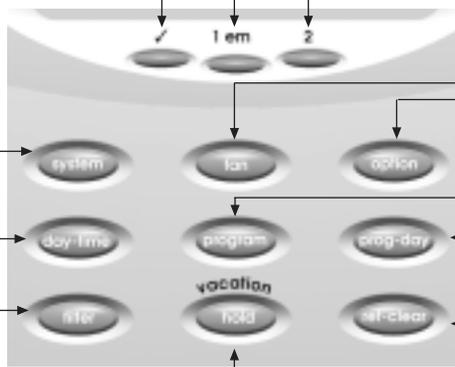

**Vacation / Hold:** Enters permanent and vacation (Programmable) HOLD modes.

**Fan Key:** Used to select fan mode. Select Auto, ON, or Program Controlled.

**Option Key:** Enters the option menu.

**Program Key:** Enters Program Mode for reviewing or changing Weekday, Weekend, Daily or Everyday programs.

**Program-Day Key:** Selects the day or days to review or change in Program Mode.

**Return-Clear Key:** Returns to normal display mode. Also clears Filter and Energy counters, and HOLD modes.



As an ENERGY STAR® Partner, Climate Technology Corp. has determined that this programmable thermostat meets the ENERGY STAR® guidelines for energy efficiency.

## INSTALLATION

### What You Need

This thermostat includes two #8 slotted screws and two wall anchors for mounting. To install your thermostat, you should have the following tools and materials.

- Slotted Screwdriver(s)
- Phillips Screwdriver
- Hammer
- Electric drill and 3/16" bit
- Two 1.5 V (AA) size alkaline batteries

### Selector Switches

In order for this Climate Technology thermostat to control your system, the system type must be specified by selector switch on the rear inside of the thermostat. There are also other selector switches that allow you to customize the features to suit your needs. Refer to Figure 2 for removal of wallplate.

**NOTE:** *When changing these features after installation, move the power switch to OFF before removing the thermostat from the wall.*

### System Selector Switches:

#### ■ Heat Pump or Multi-Stage selector (HP-MS switch)

The factory position for this switch is in the "HP" position. Leave it in this position if you have a heat pump system or need emergency heat control.

If you have a conventional multi-stage system (more than 1 stage of heat or cool), then slide the switch to the "MS" position.

**NOTE:** *The Emergency Heat Function operates both stages of heat at the same time when in multi-stage mode.*

### Selector Switches (continued)

#### ■ Heating system selector (HG - HE switch)

The factory position for this switch is in the "HG" position. Leave it in this position if you have a gas furnace or an oil burner.

If you have an electric furnace, test to see whether the Heat and Fan come on as expected.

If Fan operation is normal, leave the switch in the "HG" position.

If the Fan does not come on within a minute of the thermostat calling for Heat, change the switch position to "HE."

This selector has no effect in the cooling mode.

**NOTE:** *"HG" position is for gas and most other systems. "HE" position is for certain electric systems having a fan relay.*

**NOTE:** *This option is ignored when heat pump (HP) system is selected.*

#### ■ Low Battery Warning Selector

This Climate Technology thermostat operates on your system's 24V AC supply. Two AAA batteries may be installed to provide clock operation and program retention during power outages.

The factory position for this switch has the Low Battery Warning Enabled. If the thermostat is to be used without batteries,

the switch can be moved to Disable. In this position, the Low Battery Warning will not be displayed.

Climate Technology recommends that the Low Battery Warning be activated by sliding the switch to Enable, especially on residential systems.

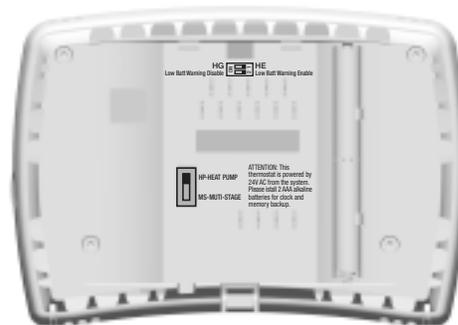


Figure A

**INSTALLATION**

**Remove Old Thermostat**


**CAUTION:** Do not remove any wiring from existing thermostat before reading the instructions carefully. WIRES MUST BE LABELED PRIOR TO REMOVAL.

- **IMPORTANT!** Turn off the power to the furnace at the main power panel or at the furnace.
- Remove existing thermostat cover. See Figure 1. Some thermostats will have screws or other locking devices that must first be removed. Once wall mounting plate is exposed, look for wires.

If wires are not visible, they may be connected to the back of the wallplate. Again, look for screws, tabs, etc. Some models have doors that open to expose wires and mounting screws. (See Figure 1).

**TYPICAL HOME THERMOSTATS**

Figure 1

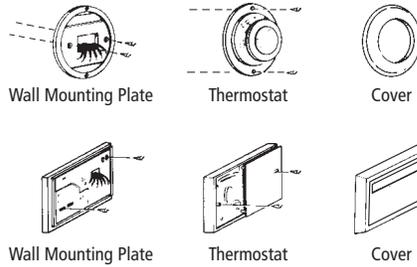

**Wire Labeling**

- Each wire coming from the wall to the existing thermostat is connected to a terminal point on that thermostat. Each of these terminal points is usually marked with a code letter as shown in Table A below and on the next page.
- The number of wires in your system can be as few as four (for single-stage systems), as many as eight, or any number in between. If you follow the labeling procedures correctly, you do not have to be concerned about how many wires there are.
- **IMPORTANT! BEFORE DISCONNECTING ANY WIRES, APPLY THE SELF-ADHESIVE LABELS PROVIDED TO THE WIRE AS**

**SHOWN IN TABLE A and B ON PAGES 13-15.** (For example, attach the label marked W to the wire that goes to the W or H terminal on your existing thermostat.) **IGNORE THE COLOR OF THE WIRES** since these do not always comply with the standard.

- After labeling wires, disconnect them from the existing thermostat terminals.
- Remove existing wallplate. To make sure wires do not fall back into wall opening, you may want to tape them to the wall.
- If hole in wall is larger than necessary for wires, seal this hole so that no hot or cold air can enter the back of the thermostat from the wall. This air could cause a false thermostat reading.

**TABLE A – TERMINAL DESCRIPTIONS**

| TERMINAL LABELS | FUNCTION (HEAT PUMP MODE) | FUNCTION (MULTI-STAGE MODE) | COMMENTS   |
|-----------------|---------------------------|-----------------------------|--|
| R               | 24VAC supply              | 24VAC supply                | Hot wire of 24VAC transformer. Powers the thermostat & system.   |
| Y1              | Compressor stage 1        | Cooling stage 1             | Activates the 1st stage compressor. (Heat or Cool for Heat Pumps)  |
| Y2              | Compressor stage 2        | Cooling stage 2             | Activates the 2nd stage compressor.  |
| W1              | DO NOT CONNECT            | Heating stage 1             | Activates the 1st stage of heating for Multi-stage systems ONLY.   |
| W2              | Auxiliary heating         | Heating stage 2             | Activates when auxiliary heating is required on heat pump systems. Activates the 2nd stage of heating for Multi-stage systems. |

(continued)

**INSTALLATION**

**TABLE A – TERMINAL DESCRIPTIONS (continued)**

| TERMINAL LABELS | FUNCTION (HEAT PUMP MODE)      | FUNCTION (MULTI-STAGE MODE) | COMMENTS  |
|-----------------|--------------------------------|-----------------------------|---|
| E               | Emergency heating              | DO NOT CONNECT              | Activates Emergency heating ONLY when the System Switch is in Emergency (em) Mode. (Ignored on Multi-stage systems) |
| O               | Reversing valve (cooling mode) | Cooling damper              | Activates reversing valve or damper in COOL mode. ALWAYS ON in COOL MODE.   |
| B               | Reversing valve (heating mode) | Heating damper              | Activates reversing valve or damper in HEAT mode. ALWAYS ON in HEAT MODE.   |
| G               | Fan                            | Fan                         | Activates the system Fan. (Can be Auto, On, or Program controlled)  |
| L               | System monitor                 | System monitor              | Activates System Check LED on the front of thermostat. (Controlled by the system, not the thermostat.)              |
| C               | 24VAC common                   | 24VAC common                | Common wire of 24VAC transformer. REQUIRED for thermostat operation.  |
| RS1+            | Remote temperature sensor 1    | Remote temperature sensor 1 | Positive (+) Terminal for Remote Sensor #1. Polarity MUST be maintained.  |
| RS1-            | Remote sensor 1 (common)       | Remote sensor 1 (common)    | Negative (-) Terminal for Remote Sensor #1. Polarity MUST be maintained.  |
| RS2+            | Remote temperature sensor 2    | Remote temperature sensor 2 | Positive (+) Terminal for Remote Sensor #2. Polarity MUST be maintained.  |
| RS2-            | Remote sensor 2 (common)       | Remote sensor 2 (common)    | Negative (-) Terminal for Remote Sensor #2. Polarity MUST be maintained.  |

OPTIONAL

**TABLE B  
HEAT PUMP CROSS-REFERENCE CHART**

| CLIMATE TECHNOLOGY TERMINALS | EXAMPLES OF DIFFERENT SYSTEM TERMINALS |                              |              |               |            |                            |              |            |            |
|------------------------------|--|------------------------------|--------------|---------------|------------|----------------------------|--------------|------------|------------|
|                              | CARRIER                                | COLEMAN                      | COMFORTMAKER | BRYANT, PAYNE | RHEEM-RUUD | TRANE, WEATHERTRON         | YORK         | LENNOX (1) | LENNOX (2) |
| R                            | R                                      | R                            | R            | R             | R          | R                          | R            | R          | V-VR       |
| Y1                           | Y or Y1                                | Y                            | Y            | Y             | Y          | Y                          | Y            | Y          | M          |
| W2                           | W2                                     | W2                           | W1           | W2            | W2         | W                          | W            | W1         | Y          |
| E                            | E                                      | E                            | jumper to W2 | E             | E          | X2                         | jumper to W2 | E          | E          |
| O                            | O                                      |                              | O            | O             |            | O                          | O            | O          | R          |
| B                            |  | B                            |              |               | B          |                            |              |            |            |
| G                            | G                                      | G                            | G            | G             | G          | G                          | G            | G          | F          |
| L                            | L or F                                 | L                            | L or X       | L             | L          |                            | X            | L          |            |
| C                            | C                                      | X                            | C, X, X1     | C, C1, X1     | X          | B                          | B            | C          | X          |
|                              |  | Note: W2 wires no connection |              |               |            | Note: T wire no connection |              |            |            |

**NOTE:** If your heat pump thermostat does not have an E wire, use the provided jumper wire to connect the E terminal to the W2 terminal, as shown in three examples above. Refer to the Wiring Diagrams on pages 58-59.

## INSTALLATION

### Mount Wallplate and Thermostat

- Remove the wallplate from your thermostat by pressing the release tab on the bottom of the thermostat. (See Figure 2.)
- Position wallplate on wall and pull existing wires through large opening. Then level for appearance. Mark holes for plastic anchors provided if your existing holes do not line up with those on the Climate Technology wallplate.
- Drill holes with 3/16" bit and gently tap anchors into the holes until flush with wall.
- Reposition wallplate to wall, pulling wires through large opening. Insert mounting screws provided into wall anchor and tighten. (See Figure 3.)



Figure 2

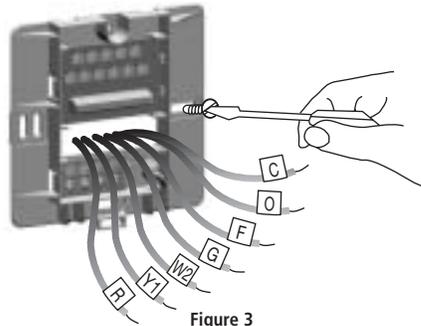


Figure 3

### Connect Wires and Mount Thermostat Cover to Wallplate

- Straighten bare end of each wire and cut or strip it to 1/4" maximum. Insert each labeled wire into the bottom of the matching terminal. Refer to figures 4 and 5.
- Hold the wires in each terminal and tighten the terminal screws securely, otherwise a loose wire could cause operational problems with your system or thermostat.
- Push excess wire back into hole to prevent interference with mounting of the thermostat.
- Make sure the Power Switch is set to OFF.
- Insert two AAA size alkaline batteries, observing the polarity marked on the unit.
- Insert the upper tabs on the thermostat body into the slot at the top of the wallplate. Press bottom of the thermostat body to snap it into the wallplate. (**NOTE: Do not force the thermostat onto the wallplate, as the terminal pins may be damaged. If it does not snap properly, the thermostat may not work.**)
- Switch on the main power at the panel or furnace.

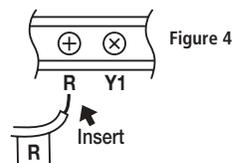


Figure 4

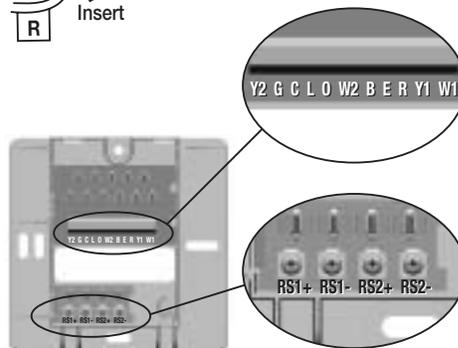


Figure 5

## PROGRAMMING

### Option Menu

Your thermostat has many settings that can be adjusted to fit your system and preferences.

- option** ■ Press to enter the Option Menu and to change to the next option selection.
- ret-clear** ■ Press at any time to return to normal mode.

#### Local temperature sensor weighting

- option 1** ■  or  to change weighting between FULL, HALF or OFF.



#### Remote temperature sensor 1 weighting

- option 2** ■  or  to change weighting between FULL, HALF or OFF. The factory default is "HALF." The current temperature measurement from sensor 1 is shown. (Blank if not connected.)



#### Remote temperature sensor 2 weighting


- option 3** ■  or  to change weighting between FULL, HALF or OFF. The factory default is "HALF." The current temperature measurement from sensor 2 is shown. (Blank if not corrected.)



**NOTE:** Refer to the Remote Sensors section on pages 51-53 for more information on sensor weightings.

#### Fahrenheit or Celsius (F°/C°) selection

- option 4** ■  or  to change the thermostat display between Fahrenheit and Celsius.

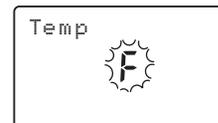

#### 12 Hr or 24 Hr. Clock selection

- option 5** ■  or  to change the time format display between 12 hour (AM / PM) and 24 hour (military).



(continued)

## PROGRAMMING

### Option Menu (continued)

#### Stage 1 SPAN selection

- option 6** ■  or  to change the SPAN setting to 1, 2, or 3. The factory setting is 2. Setting 1 will cause shorter cycle times. Setting 3 will cause longer cycle times.

Span Stg1



#### Stage 2 SPAN selection

- option 7** ■  or  to change the SPAN setting to 1, 2, 3, 4, 5 or 6. The factory setting is 2. Lower settings will cause the 2nd stage to turn on sooner. Higher settings will cause the 2nd stage to turn on later.

Span Stg2




**NOTE:** Refer to the SPAN section on page 48 for more information on SPAN settings.

#### Auto Season Changeover Deadband selection

- option 8** ■  or  to change the deadband between 3, 4, 5 or 6°F. The factory setting is 5. (°C are about 1/2°F)

Recovery

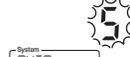System  
AUTO

**NOTE:** Refer to the Auto Season Changeover section on page 43 for more information.

#### Auto Recovery selection

- option 9** ■  or  to enable "YES" or disable "NO" the Auto Recovery Mode. The factory setting is "YES."

- system** ■ To change between Heat or Cool recovery modes.

Recovery

System  
HEAT

**NOTE:** Auto Recovery is one of the ENERGY STAR® features of this thermostat. Refer to the Auto Recovery section on pages 49-50 for more information.

#### LCD Contrast adjustment

- option 10** ■  or  to change the LCD contrast between 0 and 9. Lower numbers lighten the display. Higher numbers darken the display. The factory setting is 5.

LCD



## PROGRAMMING

### Setting Time and Day

- The LCD will show this information when batteries are first installed, or after the Reset button is pressed. The temperature will update after a few seconds.
- During time and day setting mode, the temperature and program displays will go blank.
- Example: Set the Thermostat to the current time of 2:16 PM on Saturday. Refer to the Steps below.



- Step 1**
- (day-time)
- Press to enter time and day setting mode. The current hour and the AM / PM indicator will be flashing.
  - Press to change the Hour up or down to the current hour.
- Note the AM / PM indicator, as the display will change at 12 AM and 12 PM.



- Step 2**
- (day-time)
- Press again to change from hour setting to minute setting. The current minute will be flashing.
  - Press to change the Minute up or down to the current minute.



- Step 3**
- (day-time)
- Press again to change from minute setting to day setting. The current day will be flashing.
  - Press to change the Day up or down to the current day.



- Step 4**
- (day-time)
- or
- (ret-clear)
- Press again to change back to the normal display.



**NOTE:** You may press (ret-clear) at any time during Day and Time setting to return to the normal display.

### 12 Hr. / 24 Hr. Time Format

Your thermostat is set from the factory in normal 12 (AM / PM) time format. To change to 24 hour (military) time, press (option) at any time while the Hour, Minute, or Day is flashing to toggle between the 12 hour and 24 hour

formats. The AM / PM indicator will not be displayed in 24 hour mode. Both the current time and all programs will automatically change to the selected format. The time format may also be changed in the Option Menu.

## PROGRAMMING

### Programming Introduction

Studies conducted by the Department of Energy estimate that setting your thermostat back 10°F (6°C) for two 8-hour periods during winter can reduce your fuel bill by as much as 33%. By setting your thermostat up 5°F (3°C) for two 8-hour periods during summer you can reduce your fuel bill up to 25%.

Your thermostat is capable of holding up to 4 separate programs for each day of the week.

You can program weekdays as a group, weekends as a group, all 7 days individually or everyday as a group.

The system fan may also be set to run continuously during a program time period. Finally, the number of programs per day can be reduced from 4 to 2 if desired.

Your Climate Technology thermostat is pre-programmed to meet the ENERGY STAR® guidelines for energy efficiency.

- At power-up or after a reset, all 7 days of the week have these default programs:

| Program Number | Time    | Temperature in F° (C°) |             |
|----------------|---------|------------------------|-------------|
|                |         | Heat                   | Cool        |
| 1              | 6:00am  | 68°F (20°C)            | 78°F (26°C) |
| 2              | 8:00am  | 60°F (16°C)            | 85°F (29°C) |
| 3              | 4:00pm  | 68°F (20°C)            | 78°F (26°C) |
| 4              | 10:00pm | 60°F (16°C)            | 82°F (28°C) |

- The following sections describe how to change these programs.

### Personal Program Schedule

Before changing programs, use this Personal Program Schedule to determine which times and temperature settings will best satisfy both your comfort and energy saving requirements.

Use a pencil so you can revise your records each time you change your temperature settings.

#### Heating

| Day    | Prog. 1      | Prog. 2      | Prog. 3      | Prog. 4      |
|--------|--------------|--------------|--------------|--------------|
| Mon.   | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Tues.  | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Wed.   | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Thurs. | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Fri.   | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Sat.   | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Sun.   | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |

#### Cooling

| Day    | Prog. 1      | Prog. 2      | Prog. 3      | Prog. 4      |
|--------|--------------|--------------|--------------|--------------|
| Mon.   | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Tues.  | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Wed.   | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Thurs. | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Fri.   | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Sat.   | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |
| Sun.   | Time<br>Temp | Time<br>Temp | Time<br>Temp | Time<br>Temp |

## PROGRAMMING

### Programming

■ Your thermostat can be programmed for weekdays and weekends, have unique programs for all 7 days, or the same program for everyday. Use Weekday/Weekend Programming on page 29, 7-day Programming on page 29, or Everyday Programming on page 31 to enter or revise programs to match your Personal Program Schedule.

■ Familiarize yourself with Manual Programming, so that you can easily modify your programs as your comfort needs change. Follow the steps below to change the program times and temperatures.

**NOTE:** 1) *The program time can be set in 10 minute increments, and remains the same for both Heat and Cool programs.*

2) *The program temperature can be set in increments of 1°F (1°C).*

3) *The Heat setpoint can not be set higher than the Cool setpoint, and the Cool setpoint can not be set lower than the Heat setpoint.*

4) *If the system selector is in AUTO mode, the current operating mode will be used for programming.*

5) *After 15 seconds without a key press, the thermostat will return to normal display mode.*

6) *When setting the program time, note the AM / PM indicator.*

7) *With the Auto Recovery feature enabled, you do not need to set your comfort program times early. Auto Recovery will determine how early to turn your system on, so that the room is comfortable at the program time.*

### Weekday/Weekend Programming

- Step 1**  **on off em** ■ Slide Power Switch to ON.  
 ■ Press to select HEAT or COOL to program the corresponding system. (AUTO may be selected, but does not affect the programming steps.)

**NOTE:** *If the power switch is in the OFF position, the last system selected will be programmed.*



- Step 2**  **program** ■ Press to enter program mode. Weekdays are displayed and program 1 is flashing.

- Step 3**  **OR** ■ The Program hour and AM or PM indicator are flashing. Press to change the hour.



- Step 4**  **program** ■ Press again to change to the minute position. The current minute will be flashing.

-  **OR** ■ Press to change the minute.



(continued)

## PROGRAMMING



### Weekday/Weekend Programming (continued)

- Step 5**  ■ Press again to change to the program temperature. The current temperature will be flashing.  
 ■ Press to change the temperature.  
 or 
- Step 6**  ■ Press again to move to the next program number.  
 ■ Repeat Steps 3 through 5 to change the remaining Weekday programs.
- Step 7**  ■ Press to change to Weekend programs.  
 ■ Repeat steps 3 through 5 to complete the weekend programs.  
 ■ Press at any time to exit the Program Mode.  
 ■ After 15 seconds, the thermostat will return to normal mode automatically.
- Step 8**  ■ Change to the other system, and repeat steps 2 through 7.



### 7-Day Programming

- Step 1**  ■ Slide Power Switch to ON.  
 on off em  ■ Press to select HEAT or COOL to program the corresponding system. (Auto may be selected, but does not affect the programming steps)
- Step 2**  ■ Press to enter program mode, display shows weekday programs.  
 ■ Press 2 times to reach the Monday program.
- Step 3**  ■ The Program hour and AM or PM indicator are flashing. Press to change the hour.  
 or 
- Step 4**  ■ Press again to change to the minute position. The current minute will be flashing.  
 ■ Press to change the minute.  
 or 

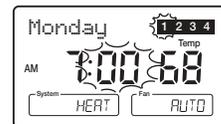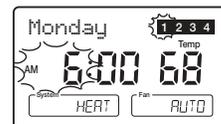

(continued)

## PROGRAMMING


### 7-Day Programming (continued)

- Step 5 **program** ■ Press again to change to the program temperature. The current temperature will be flashing.  
 ■ Press to change the temperature.
- Step 6 **program** ■ Press to move to programs 2, 3 and 4.  
 ■ Repeat Steps 3 through 5 to complete the programs for Monday.
- Step 7 **prog-day** ■ Press to change to the next day's programs.  
 ■ Repeat Steps 3 through 6 to complete the selected day's programs.  
 ■ Continue repeating Steps 3 through 7 to program all 7 days of the week.
- Step 8 **ret-clear** ■ When finished, press to return to normal mode.  
 ■ After 15 seconds, the thermostat will return to normal mode automatically.
- Step 9 **system** ■ Change to the other system and repeat steps 2 through 8 above.



### Everyday Programming

- Step 1 **on off em** ■ Slide Power Switch to ON.  
**system** ■ Press to select HEAT or COOL to program the corresponding system. (Auto may be selected, but does not affect the programming steps)
- Step 2 **program** ■ Press to enter program mode, display shows weekday programs.  
**prog-day** ■ Press 9 times to reach the Everyday program.
- Step 3 ■ The Program hour and AM or PM indicator are flashing. Press to change the hour.
- Step 4 **program** ■ Press again to change the minute position. The current minute will be flashing.  
 ■ Press to change the minute.

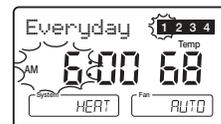

(continued)

## PROGRAMMING

### Everyday Programming (*continued*)

- Step 5**
- program** ■ Press again to change to the program temperature. The current temperature will be flashing.
  - ↑**  
**or**  
**↓** ■ Press to change the temperature.
- Step 6**
- program** ■ Press again to move the next program number.
  - Repeat Steps 3 through 5 to change the remaining programs.
  - ret-clear** ■ Press at any time to exit the Program Mode.
  - After 15 seconds, the thermostat will return to Normal mode automatically.
- Step 7**
- system** ■ Change to the other system and repeat steps 2 through 6.



### Program Options

#### Programmable Fan

- fan** ■ Any time during programming, this will change the fan display between "AUTO" and "ON" for the selected system and Program number. (Heat and Cool can be set separately.)
- "AUTO" = Fan control runs when the system is ON
- "ON" = Fan control runs continuously



**NOTE: Fan must be set to "PGM" for the Programmable Fan to be activated.**

#### 2 or 4 Programs Per Day

- option** ■ Any time during programming, this will change the number of programs per day between 2 and 4.
- Program numbers 2 and 3 are turned OFF when 2 programs per day are selected.
- The display will show which programs are available. If only the active program number is displayed, then there is a difference between days of the selected group.



## PROGRAMMING

### Reviewing Programs

You may want to review the programs to confirm that the settings are compatible with your lifestyle.

- Weekday Programs** (program) ■ Press to display M - F programs.  
 ■ Press repeatedly to cycle through the 4 programs.



- Weekend Programs** (prog-day) ■ Press to display the Sa - Su programs.  
 (program) ■ Press repeatedly to cycle through the 4 programs.



- Daily and Everyday Programs** (program) ■ Press to display M - F programs.

**NOTE: Time or Temperature display will be blank when at least one weekday program is different. (All programs will be displayed if programmed in Everyday mode.)**



- Daily and Everyday Programs (cont.)** (prog-day) ■ Press to change to Sa - Su. Again, if part of the display is blank, one of the weekend programs is different.  
 ■ Press again to change to Monday's program.  
 ■ Continue pressing to cycle through each day, or to reach the Everyday programs.



- (program) ■ Press repeatedly to cycle through the 4 programs.

- (ret-clear) ■ Press to return to normal mode.

- After 15 seconds, the thermostat will return to normal mode automatically.

**NOTE: Programs take affect as soon as the thermostat returns to normal mode.**

If you are armchair programming the thermostat, slide the system selector to the OFF position before mounting the thermostat to the wallplate.

**OPERATION**



**Power Switch**

The Power switch on the front of the thermostat determines the operating mode of the thermostat. You may select ON, OFF or Emergency Heat (EM). When the Power Switch is OFF, all outputs are positively disconnected from the system.



**NOTE:** Anytime you install or remove the thermostat from the wallplate, slide the Power Switch to the OFF position to prevent the possibility of a rapid system On-Off.



**NOTE:** When Emergency Heat (em) is selected on a multi-stage system, the thermostat will activate both stages of heat (W1 and W2). Thus, the heat control becomes single-stage.

**System Selection Key**



- Press to select the desired system.
- When Auto is selected, the system will change between Heat and Cool automatically. Refer to the Auto Season Changeover section on page 43.

**NOTE:** The default system selection at power-on or after a reset is HEAT. Therefore it is recommended that 2 AAA batteries be used for backup during power outages.

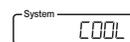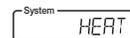

**Fan Key**




- Press to set the fan operation.
- AUTO: the fan will turn on with the system. On a multi-stage system, the fan is controlled by the system when the Heating system selector has been set to HG.

ON: the fan will run continuously.

PGM Auto or ON: (Programmable Fan) The fan will select AUTO or ON, depending on the setting in the programs. Refer to the Program Option section on page 33.

**NOTE:** The fan must be set to "PGM" for the fan's program settings to take effect.

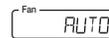

**System Indicator Light**

When the thermostat activates your system, LED lights are turned on just below the LCD display.



**System Monitor**

This red LCD is controlled by your system and will turn on if there is a problem with your system. It can only work if you have a connection to the L terminal.

(continued)

**OPERATION**



**System Indicator Light (continued)**



**Stage 1 Light**

This LED will turn on in GREEN when the first stage of heat or cool is activated. When in Emergency Heat mode, this LED will turn on in RED when the first stage of emergency heat is activated.



**Stage 2 Light**

This LED will turn ON in YELLOW when the second stage of heat, emergency heat or cool is activated.

The Stage 1/Emergency and Stage 2 LED's will flash On/Off when the corresponding stage is being held off temporarily. For example, during a compressor delay.

**Emergency Heat**

When the Power Switch is in the "em" position, the thermostat is placed in the Emergency Heat mode. The compressor will not operate in this mode and only auxiliary heat will be used.

When Emergency Heat is selected on a multi-stage system, both stages of heat operate at the same time. So, the heating acts like a single-stage system.


**NOTE: Emergency Heat Mode is not an energy saving setting, so use only when necessary.**

**Reviewing the Current Temperature Setting**

- Current time and temperature.
- Thermostat is set to AUTO and the heating system is selected.



- Press for 1 second or less.
- Set Temperature is shown beside current room temperature.
- If held for over 1 second, Temporary Manual Override mode is entered. Refer to the next section.

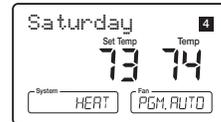


**OPERATION**

72° 71° 70°

**Temporary Manual Override**

To temporarily change the current set temperature without affecting your program:

- Press  or  and hold for about 1 second to enter Manual Override mode. Display will flash.
- Press  or  to change to your desired new temperature.
- Press  to return to normal mode, or wait 5 seconds for it to return automatically.
- The current program number will flash to signify the Temporary Override.
- At the next program change, the Temporary Override is canceled, and the next program temperature becomes the setpoint temperature.

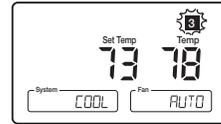

To end the Temporary Manual Override:

- Press  to return the set temperature to the current program set temperature.

**NOTE:** The Auto Season Changeover feature will not operate while the thermostat is in Temporary Manual Override. Refer to the Auto Season Changeover feature on page 43 for more information.

**NOTE:** If Vacation Hold is set, then the number of days remaining will also be displayed. Refer to the Vacation (Programmable) Hold section on page 42 for more information.

**Permanent Manual Override**

To hold your manual override for an extended period of time:

- Press  to make the current room temperature the HOLD temperature. HOLD will alternate on the display with the day and any other messages.
- Follow the Temporary Override instructions above to change the Permanent Override temperature.
- You can confirm the held set temperature by pressing  or  for less than 1 second.



To end the Permanent Manual Override:

- Press  to return to the current program. The HOLD display will be canceled.

**NOTE:** The Auto Season Changeover feature will not operate while the thermostat is in Permanent Manual Override. Refer to the Auto Season Changeover feature on page 43 for more information.

72° 71° 70°

**Vacation (Programmable) Hold**

This thermostat can hold a fixed temperature for a selected number of days (up to 30). After the selected number of days, the thermostat will return to normal program operation. This feature allows you to return home to your normal comfort setpoint temperatures.



- Press and hold for 2 seconds to enter Vacation Hold mode. The set temperature will be the current room temperature and the Vacation counter will be set to 1 day.



- Use to set the Vacation Hold temperature.



- Press to set the Vacation Hold counter to the number of days you will be away from home.
- "Vacation" will alternate on the display with the day and any other messages.

To end Vacation Hold:



- Press to return to the current program. The flashing Vacation display will be canceled.



**NOTE:** The Auto Season Changeover feature will not operate while the thermostat is in Vacation (Programmable) HOLD. Refer to the Auto Season changeover feature on page 43 for more information.

**Auto Season Changeover**

When the System Selection is in AUTO position, the thermostat will automatically change between Heating and Cooling systems, depending on your program. We recommend keeping your programmed heating and cooling temperatures at least 5°F (3°C) apart to allow the Auto Season Changeover to occur when the appropriate temperature span has been reached. However, if your heating and cooling programs set temperatures are close, there is a built-in program to prevent the thermostat from changing unnecessarily. This "Deadband" can be adjusted. Refer to the Options Menu section on pages 18-21.

Auto Season Changeover is disabled when the thermostat is in Temporary or Permanent Override, or Vacation Hold, as these overrides are energy saving settings. While in any of these modes, "AUTO" will be temporarily removed from the LCD display.

"AUTO" will return when these holds are cleared. Auto Season Changeover will still function in Home Today mode, as this is a comfort setting.

For example, you may have the following temperatures programmed at a given time:

Heat Set Temp = 68°F  
Cool Set Temp = 78°F

If the room temperature rises above 78°F, then the thermostat will automatically change to cool mode and turn on the air conditioner.

Likewise, the thermostat will automatically change to heat mode and turn on heat when the room temperature falls below 68°F.

## OPERATION

12° 11° 10°

44

**Home Today**

This Climate Technology patented feature allows you to quickly and temporarily override your energy saving program setting on days when you are normally away from home with one key press.



- Press to enter the Home Today override. The highest program temperature for today will be selected from your programs in Heat mode and become the set temperature. (In Cool mode, Home Today will select the lowest program temperature for today to be the set temperature.)
- "HOME" will alternate on the display with the day and any other messages.
- When pressed during the first or second program of the day, Home Today will automatically return to program control at the start of the fourth program of the day. If Home Today is pressed after the start of the third program time of the day, the thermostat will remain in Home Today mode until the first program of the next day.



- If Home Today is already active, you may similarly extend it to the first program of the next day by pressing the key again after the start time of the third program.



- If the system is changed between Heat and Cool modes (either manually or by Auto Season Changeover) during the "Home Today" override period, the setpoint temperature will be automatically updated. It will automatically change from the highest heat program setpoint to the lowest cool program setpoint, or from the lowest cool program setpoint to the highest heat program setpoint.

- Press to exit Home Today mode before the schedule ending time. "HOME" is no longer displayed on the LCD screen, and the thermostat returns to the current program.
- You can manually change the setpoint temperature while in Home Today mode. Refer to the Temporary Manual Override instructions on page 40. Manually changing the set temperature while in Home Today mode will not affect the Home Today ending time. However, the set temperature will not change automatically with a manual or Automatic change between heating and cooling.



- You may also press the Home Today key while in Temporary Manual Override. The operation is the same as the previous point above.

## OPERATION

72° 71° 70°

46

**Energy Monitor**

The Energy monitor feature measures and stores the amount of time the heating and air conditioning system operates. Usage can be displayed for Today (since 12AM), Yesterday, This Month (up to 30 days), Last Month (last 30 days), and Total (up to 999

Hrs. 59 Min.). By monitoring your energy usage, you see how much the setback periods are saving and you can test program adjustment to save even more. Use table on page 25.



- To review energy usage, press to cycle through Today, Yesterday, [number] Days, Last 30 days, and Total. Press again to return to normal mode, or wait 15 seconds for the display to return to normal mode. You can also return to normal mode at any time by pressing RET CLEAR.



- For example: This LCD display shows Today's usage to be 10 Hours, 26 minutes.



- Press and hold for 3 seconds to reset the Energy Monitor's counters while in Energy Monitor mode. The display will blink, and all counters will be cleared to zero.

**Filter Monitor**

47

Your thermostat also keeps a record of the number of hours your filter has been in use. To maximize your system's performance and energy efficiency, change or clean your filter regularly.


- When the total system run time for heat and cool reaches 500 hours, "FILTER" will alternate on the display with the day to remind you to clean or change your system's filter. "FILTER" will continue to display until the counter is set back to zero.



- Press to review total filter usage. After 15 seconds, the display will return to normal mode, or you can hit RET CLEAR to exit immediately. The Filter Monitor will display up to 999 hours and 59 minutes of usage. In this example, the counter is at 410 Hours, 26 minutes.



- To reset the Filter Monitor counter, hold for 3 seconds. The display will blink, and the counter will be reset to zero.

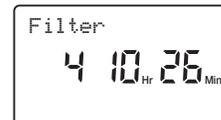

**OPERATION**

72° 71° 70°

**SPAN Settings****STAGE 1**

Your thermostat is set at the factory to cycle at 1°F (0.5°C) above and below the set temperature in Stage 1. (Span = 2.) This setting has been designed to provide a comfortable room temperature under most all conditions. However, if you find your system cycling too fast or too slow, then the Span can be adjusted to modify the cycle time. Refer to the Option Menu Stage 1 Span selection on page 20.

- Span = 1. This decreases the cycle time by causing your system to run shorter.
- Span = 3. This increases the cycle time by causing your system to run longer.

The Span settings remain the same for both HEAT and COOL.

The Span can be changed at any time and is independent of program times or temperatures.

When the thermostat is powered on or the Reset key is pressed, the Span is reset back to setting 2.

**STAGE 2**

The second (or auxiliary) stage turns on when the first stage does not have enough capacity to reach the desired set temperature.

The factory setting for Stage 2 Span is 2. It can be adjusted between 1 to 6; with the second stage being activated sooner at lower numbers and later at higher numbers.

**Auto Recovery**

Climate Technology's Auto Recovery feature meets the ENERGY STAR® guidelines for energy efficiency by allowing the heating or cooling system to recover gradually from an energy-saving setpoint temperature to a comfort setpoint temperature. In Heat Pump mode, it also maximizes the efficiency of recovery by minimizing the use of auxiliary heat, which results in maximum savings in various weather conditions.

Auto Recovery calculates how early to turn your system back On, so that the room temperature is already comfortable by the start of the comfort temperature program period. Auto Recovery works in both Heat and Cool modes.

For example, in Heat mode, you could have the following programs:

|                        |                      |
|------------------------|----------------------|
| Program #4 (Overnight) | Program #1 (Morning) |
| Set Temp = 60°F        | Set Temp = 68°F      |
| Time = 10PM            | Time = 6AM           |

The room temperature fell to 60°F overnight. Rather than having the thermostat turning on at 6AM, Auto Recovery would note the temperature difference between 60°F and 68°F and turn the Heat on approximately 30 minutes early. Therefore, the room temperature at 6AM would be about 68°F instead of 60°F.

- When the thermostat is in Auto Recovery mode, the display will alternate "RECOVERY" with the day, and the program indicator will flash.

**Details of Auto Recovery Operation:**

- Auto Recovery can be disabled by selecting "NO" in the Option Menu. Refer to page 21.
- Auto Recovery will not operate if Permanent hold, Vacation hold Temporary hold or Home Today is in operation. It will also not operate if the thermostat resets due to AC power loss with no backup batteries.
- Auto Recovery can be canceled manually if RET CLEAR is pressed during the recovery process. If a recovery process is canceled manually then the recovery process will not start again until the next program period starts (an exception is that if time or program is changed then the thermostat will check Auto Recovery conditions immediately).

(continued)

12° 11° 10°

**Auto Recovery (continued)**

- Auto Recovery will be canceled if HOME TODAY or HOLD is pressed during the recovery process. The thermostat will enter Home Today, Permanent hold or Vacation hold.
- Auto Recovery will be canceled and change to Temporary Manual Override mode if the setpoint is adjusted during the recovery process.
- If the system changes between heat and cool (automatically or manually) then the thermostat will recalculate Auto Recovery again. Setpoint temperature will be changed to the opposite system's comfort temperature if the recovery entry criteria are still met. Otherwise, the recovery process will be canceled and return to program control mode.

**Keyboard Lock**

The Keyboard can be locked to prevent unauthorized changes to the thermostat.



- To lock or unlock the keyboard, press and hold BOTH keys for 3 seconds. The keyboard is locked when KEY LOCK appears on the display.

- All keys are locked, but any time a key is pressed, KEY LOCK will appear on the display for 1 second and the backlight will operate.

**Backlighting (INDIGLO® Night-Light)**

Your thermostat has an electroluminescent lamp that backlights the display for easy viewing in the dark.

When any key is pressed the display is illuminated.

The display will remain illuminated for 15 seconds after the last key is pressed. This allows the light to stay on if you need to op-

erate several keys. The backlight will decrease in brightness before shutting off.

**NOTE: The backlight is powered by the 24V AC supply. It will not operate when there is an AC power interruption or if the thermostat is removed from the wallplate.**

**Remote Sensors**

This Climate Technology thermostat supports the addition of 1 or 2 optional remote sensors (Model 43658). Along with the sensor inside the thermostat (Local), the displayed room temperature can be a weighted average of these sensors. The Option Menu on pages 18-21 shows how to change the weighting of each sensor.

**Description of the weightings:**

FULL = The full temperature value is used in the averaging calculation

HALF = Half of the temperature value is used in the averaging calculation

OFF = The temperature is ignored, and not used in the averaging calculation.

**How to use the weights to control temperature:**

- To take a simple average of all sensors, set all of them to FULL or HALF. (This gives the same result because the weight is the same.)
- To give priority to one area over another, set the priority sensor to FULL and the other 1 or 2 sensors to HALF. (Setting 2 sensors to FULL and the 3rd to HALF gives even more weight to sensors 1 and 2.)
- To control only from the reading of a single Remote sensor, set the desired sensor to FULL, and the other Remote and Local sensor to OFF.

(continued)

**OPERATION**

72° 71° 70°


**Remote Sensors (continued)**

**Notes on sensor calculations:**

- If the sensor reading exceeds temperature limits ("HI" or "LO") then the maximum or minimum value will be used in the calculation.
- If all 3 sensors are set to OFF, the Local sensor will automatically be set to FULL.
- If there is a problem with the installed remote sensors, then the Local sensor reading will be used for the temperature.


**Detection of Remote Sensors:**

- When AC power is present, the thermostat can detect any remote sensors connected. (It may take up to 30 seconds.) "Found RM1" or "RM2" will alternate with the day display.
- The maximum distance a remote sensor can be wired to the thermostat is 328 ft. (100m). For short distances up to 100 ft. (30m), standard thermostat wire will work. For longer distances, or environments with a lot of RF noise, shielded or twisted pair wire should be used.
- If the thermostat has a problem communicating with a remote sensor, then "Check RM1" or "RM2" will alternate with the day display.

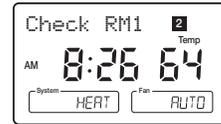

**Review Remote Sensor Temperatures:**

- option** ■ Press to see the currently measured temperature for each sensor, along with its weight.
- Example: Standard display

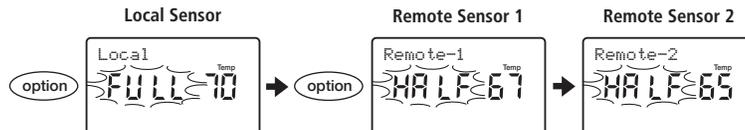

The system is controlling around the weighted average of 68°F, based on readings of 70°F, 67°F and 65°F.

## SAFETY FEATURES

54

### AC Power Monitor

- This thermostat operates on 24V AC, which is provided by your system's transformer. If the system loses electricity, then the 24V AC power is lost also.
- The 2 AAA batteries provide backup operation of the clock, as well as all programs and settings.
- If the AC power is lost, then the LCD display will alternate "No AC Pwr" with the day.
- Without AC power, the following functions are disabled:
  - The system is turned off.
  - The Backlight function is disabled.
  - The remote sensor temperature readings are not available.



### Low Battery Warning

Your thermostat has a low battery warning system. When the batteries are detected to be weak, the low battery warning is indicated by "Low Batt" alternating on the LCD display with the day. You then need to replace the batteries with 2 new

AAA alkaline batteries. You have 30 seconds to change the batteries before the settings are lost.



### Error Mode


55

If the thermostat is unable to control your system due to an unexpected problem, the thermostat will enter Error Mode. In this condition, the thermostat flashes "Error" and a code number on the LCD display, and shuts off your system.

To correct this problem, replace the batteries with 2 new AAA alkaline batteries, even if you have recently replaced them. Next, use a paper clip to press the RESET button next

to the keypad. You will need to reprogram your thermostat and confirm normal operation.

If Error Mode returns, please call Climate Technology Technical support at 800-676-7861 for further information.

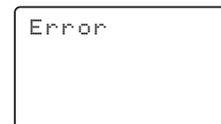

**TROUBLESHOOTING**


| <b>Problem</b>  | <b>Solution</b>   |
|---|---|
| <b>SCRAMBLED OR DOUBLE DISPLAY<br/>(numbers over numbers)</b> | 1. Remove clear Mylar sticker   |
| <b>NO DISPLAY</b>   | 1. Check terminal connection. A common (C) wire is required for operation.<br>2. Check battery connections and batteries.<br>3. Press RESET button with a small pin and hold in for two seconds.                            |
| <b>ENTIRE DISPLAY DIMS</b>                                    | 1. Replace Batteries<br>2. Adjust LCD contrast in the Option Menu.  |
| <b>PROGRAM DOES NOT CHANGE<br/>AT YOUR DESIRED SETTING</b>    | 1. Check that the time is set properly to "AM" or "PM".<br>2. Check that the thermostat is not in "HOLD" or "Home Today" modes.<br>3. Check for the correct day setting.<br>4. Check any remote sensor readings or weights. |
| <b>AUTO / FAN DOES NOT TURN ON</b>                            | 1. Move HG/HE selector to opposite position   |
| <b>FAN RUNS CONTINUOUSLY</b>                                  | 1. Check fan setting. It may be "ON" or in Programmable Fan mode "PGMON".   |

| <b>Problem (cont.)</b>   | <b>Solution (cont.)</b>  | <b>57</b> |
|--|--|-----------|
| <b>HEATING OR COOLING DOES<br/>NOT GO ON OR OFF</b>  | 1. Check that the system selector key is in the correct position ("HEAT," "COOL" or "AUTO").<br>2. The thermostat may be in the AUTO mode. Look for "AUTO" on the LCDdisplay. If the Heat and Cool program temperatures are close, then the thermostat requires a larger room temperature change before changing from Heat or Cool.<br>3. There may be as much as a 4 minute delay before the Heat or Cool system turns On - wait and check. (Compressor protection delay.)<br>4. Check your circuit breakers and switches to ensure there is power to the system.<br>5. Replace batteries.<br>6. Make sure your furnace blower door is closed properly.<br>7. Check the position of the Heat Pump or Multi-Stage selector switch. |           |
| <b>ERRATIC DISPLAY</b>   | 1. Press the RESET button once with a small pin and hold for two seconds. The thermostat will need to be re-programmed.  |           |
| <b>IF UNIT CONTINUES TO OPERATE<br/>IN THE OFF POSITION</b>                                    | 1. Replace unit.   |           |
| <b>THERMOSTAT PERMANENTLY<br/>READS "HI," "LO," OR "Error"<br/>AFTER PRESSING RESET BUTTON</b> | 1. Replace unit.   |           |

If you experience any other problems, call 800-676-7861 from 8 AM to 5 PM Central Time for technical assistance.

**WIRING DIAGRAMS**

**HEAT PUMP SYSTEMS**

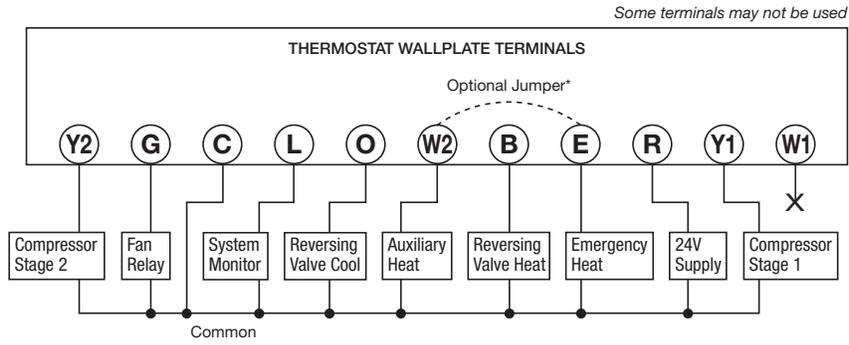


**NOTE: Common wire connection is REQUIRED.**

X - No Connection


\*Add jumper between W2 and E on systems without an E wire.

**MULTI-STAGE SYSTEMS**

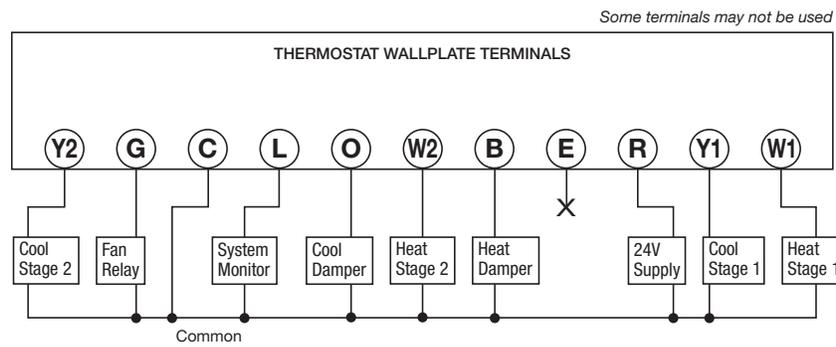

**NOTE: Common wire connection is REQUIRED.**

X - No Connection

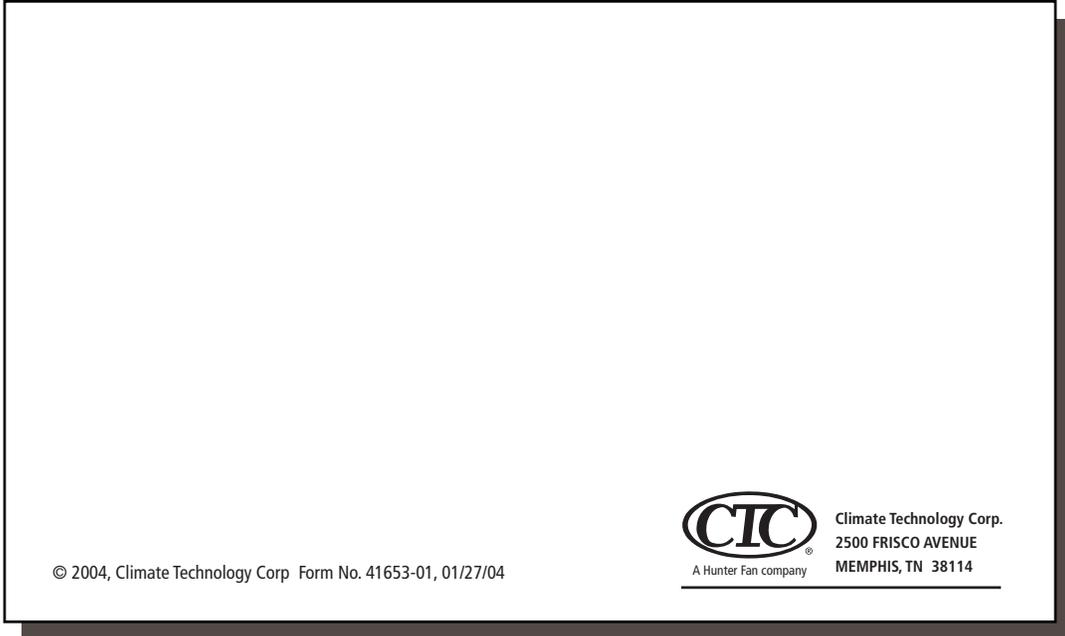

© 2004, Climate Technology Corp Form No. 41653-01, 01/27/04



Climate Technology Corp.  
2500 FRISCO AVENUE  
MEMPHIS, TN 38114

A Hunter Fan company